


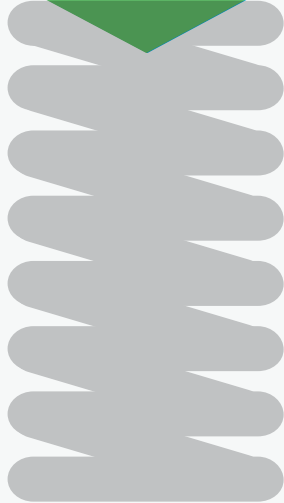

HOW TO

REPLACE

REAR
COIL
SPRINGS



1
2
3
4
5
6
7

Raise the rear of the cart and place jack stands under the frame. Place a car jack under the rear end housing of the cart.

Remove the rear shocks from cart and retain hardware.

Compress the spring with a screwdriver and remove the top spring retainer with pliers. Slide off old spring.

Make sure that the shock is fully extended. Slide the new HD Spring onto shock, and replace stock retainer on top of the spring.

Push the spring tight against retainer, and place the two-piece collar (included in kit) in the remaining space between the spring and the bottom of shock. Tighten hardware using Allen wrench.

Repeat steps 3-5 for second shock.

Reinstall shocks on back of cart.

