


DRIVEN CLUTCH COMPRESSION TOOL

1) REMOVAL:

Using the pressing tool (white PVC cap) press the spring and cup down far enough to remove the snap ring. *Make sure your safety glasses are in place. See picture NOTE: A press works well for this and or a (weekend warrior) method of a 2x4 pressing down with leverage.

2.) REASSEMBLY:

Secure the snap ring with the 90 degree snap ring pliers and make sure it seats all the way

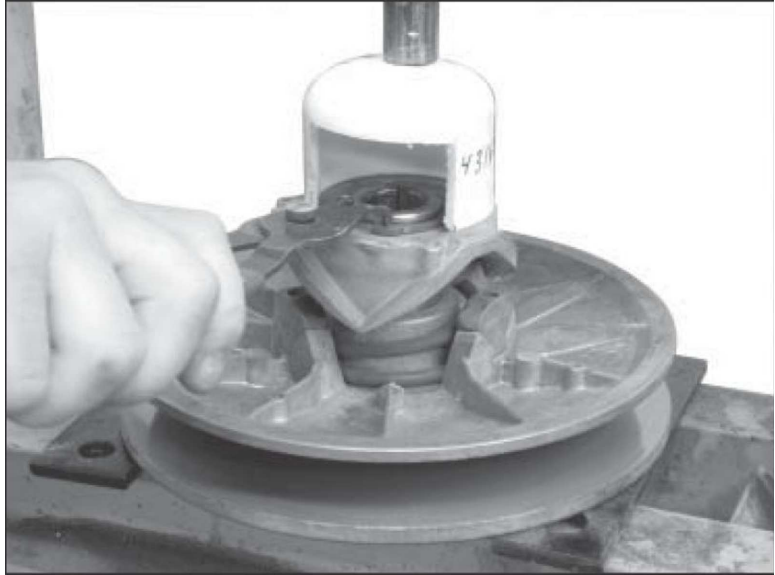

DRIVEN CLUTCH COMPRESSION TOOL

1) REMOVAL:

Using the pressing tool (white PVC cap) press the spring and cup down far enough to remove the snap ring. *Make sure your safety glasses are in place. See picture NOTE: A press works well for this and or a (weekend warrior) method of a 2x4 pressing down with leverage.

2.) REASSEMBLY:

Secure the snap ring with the 90 degree snap ring pliers and make sure it seats all the way

