

**E-Z-GO RXV Brush Guard
Installation Instructions**
Black- Part# 7291
Gunmetal- Part# 7292
Stainless- Part# 7293



Parts List



- Brush Guard-1
- 3/8 x 1 Bolt-1
- Fender Washer-1
- Locknut-1



 *Always wear appropriate eye protection!*

Installation Instructions:

1. Using a 15mm wrench or socket remove the outer upper shock mount nut that holds the front bumper on the cart from both sides of the cart.
2. Using the stock nut loosely mount the brush guard to the stock bumper mount on both sides of the cart as shown in Figure 1.
3. Center the brush guard and securely mount.
4. Using the supplied 3/8 x 1 bolt, washer and locknut mount the bottom brush guard bracket to the stock drain hole under the cart as shown in Figure 2.
5. Securely tighten all bolts.

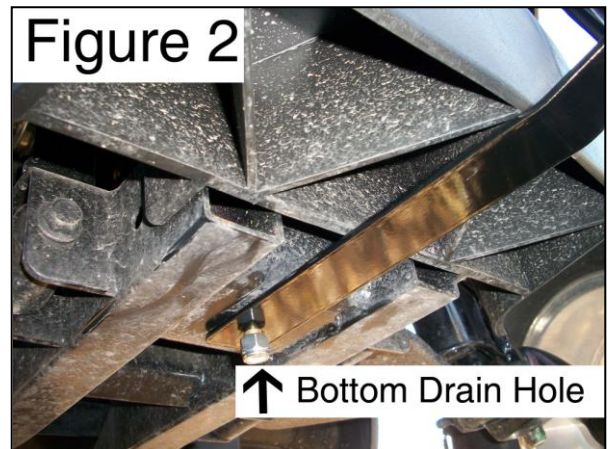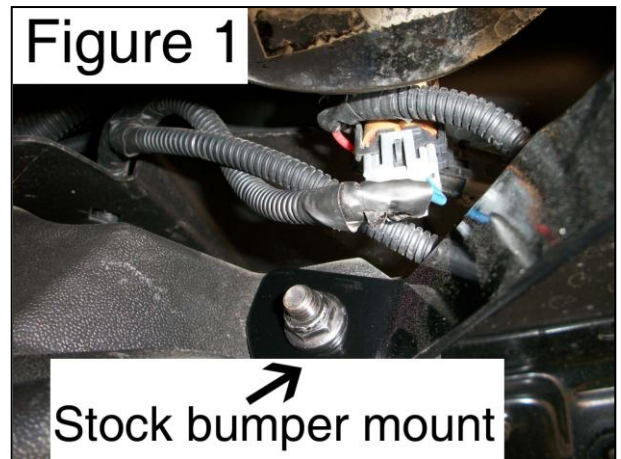

866-405-2537

www.jakesliftkits.com