



# Heavy-Duty Rear Spring Kit Set

Part # 96280

For Yamaha® Drive<sup>2</sup>



We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.

Always wear appropriate eye protection

## INSTALLATION INSTRUCTIONS

### TOOLS NEEDED

- Wrench
- Screwdriver
- Jack stand
- Floor Jack

### ITEMS INCLUDED

- 2 Spring
- 2 Collars
- 4 Screws
- 4 Nuts

## STEP 1

Jack the rear of the cart up and place the jack stands under the frame to support the cart. Place a floor jack under the rear differential of the cart.

## STEP 2

Remove the upper shock bolt of the shock from top of goal post. Retain the nuts and bolts for reinstallation. Lower the jack and differential to gain access to the top of the shock.


## STEP 3

The top spring retainer must be removed from the shock. Slide rubber Bushing down. Place the Screwdriver in open end of retainer, pry down, and then pull off the retainer with a set of pliers.



## STEP 4

Once the retainer is removed, slide off stock spring and dispose of it. Leave the washer in place.

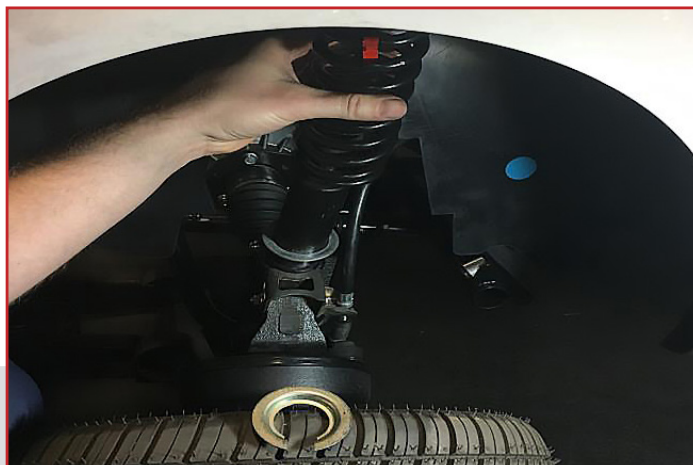

**STEP 5** Install the provided collar using the provided hardware on top of the washer.



**STEP 6** Making sure that the shock is fully extended, slide Jake's new black textured spring onto shock.



**STEP 7** Push Spring up tight against the 2 piece collar. Pry down on the spring again and replace the retainer on the top spring.



**STEP 8** Repeat Steps 1-5 for second shock.

**STEP 9** Use the jack to raise the shocks back into goal post and reinstall the retained hardware.



**INSTALLATION COMPLETE**

*Jake's*