

MADJAX



Part # 03-007 Fender Flares

Will fit Alpha Body

ITEMS INCLUDED

Fender Flares
Screws X20

TOOLS NEEDED

Power Drill
9/32" Drillbit
Marking Pen



Madjax® recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your bodywork. The Madjax® Limited Warranty only covers defects in materials and workmanship, and does not cover damage due to improper installation. If you are having difficulty installing this product, contact your Authorized Madjax® Dealer.

STEP 1


Test fit fender flare to bodywork to determine best placement. Holding the fender flare in place, mark locations to be drilled.



STEP 2

Drill first hole using a 9/32" drill bit. Ensure area behind body is clear to avoid potential damage to wiring or other bodywork. Insert screw half-way to secure fender flare. Check other marked holes to ensure proper placement before drilling. Once sure of placement, rotate fender flare out of the way and drill other holes.

Repeat Steps for the other three fender flares.

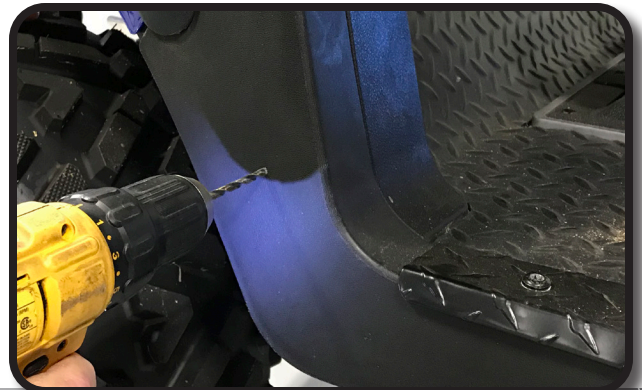

STEP 3

For Rear fender flare, align with underbody and repeat steps 1-2.



INSTALLATION COMPLETE

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.