



03-100  
**FENDER FLARES**  
will fit CLUB CAR® PRECEDENT®  
Installation Instructions

**INCLUDED:**




Fender Flares



20 Push Rivets

**We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your car's body.**

**1**  
Test fit fender flare to bodywork to determine best placement. Holding the fender flare in place, mark locations to be drilled.

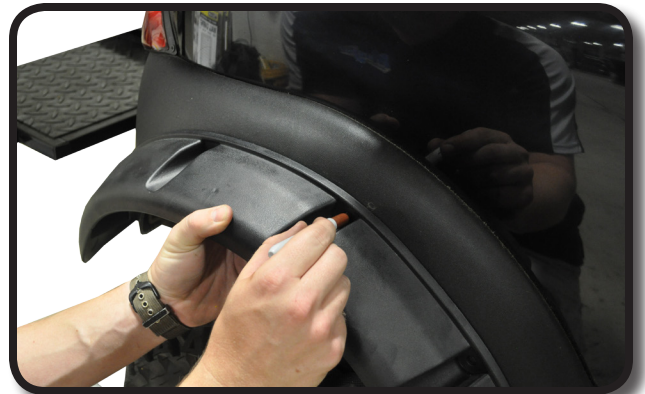

**2**  
Drill first hole using a 9/32" drill bit. Ensure area behind body work is clear to avoid potential damage to wiring or other bodywork.



3  
Insert barbed push rivet half-way to secure fender flare. Check other marked holes to ensure proper placement before drilling. Once sure of placement, rotate fender flare out of the way and drill other holes.



4  
Push the first rivet in to secure fender flare and then insert other rivets.

*Repeat Steps 1-4 for other three fender flares.*



**INSTALLATION COMPLETE**

