

# Touring Installation Guide

## Step #1

Install the steel support on the ATV's rack.  
Use the two bolts of the rack to attach the top of the bracket.




## Step #2

Drill a 5/16" hole on the 2 locations shown below:



## Step #3

Attach the front of the cargo box to the ATVs

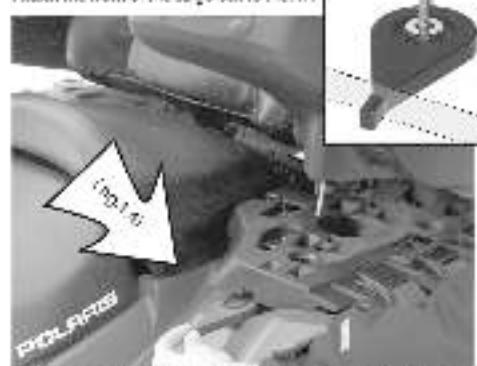

Slide an anchor under the rack on each side and place the cargo seat on the rack. (Fig. 1.4) Screw on the bolts but do not tighten completely for now.

## Step #4

Attach the back of the cargo box on the ATVs



Make a pencil mark on the cargo box to indicate the middle hole.

Drill a 5/16" hole on the pencil mark.

Tip: Lift the cargo box a little to make drilling easier.



Complete the installation by tightening the bolt and the 2 front bolts.

## ACCESS LID:

The keys for the lock are located inside the cargo box.

This cargo box is weather resistant but not waterproof.

## MAINTENANCE:

Remove box and wash with water and mild soap. For a brighter finish, you can use a common silicone based protector for plastic and rubber. Do not apply on seat cushion as it will be too slippery.

Lubricate the locks on a regular basis. This will help protect it from rust and frost.

## WARNING:

Do not carry any flammable, explosive material or liquids inside the cargo box.

All wire connections should be done by a trained professional.

## Wire connections and specifications

Green	Direct
Yellow	Rear light
White	Ground

## De Luxe model

Heated grips	18 watts ( per grip)
Heated grips and cushion seat	36 watts
Fuse	5 amps

## Intensity modes

Heated grips	Upward for high intensity / Center for OFF mode / Downward for low intensity
Heated cushion seat	On/ Off switch