
## Installation Guide for Wes Touring Outlander Max 2013.



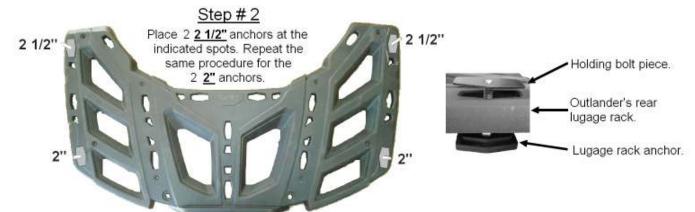

## Step # 3





Inside the Wes Touring Outlander box, place a fender washer on each bolt than screw a knob on each of them.



