

Installation Guide

Wes TWIN Box set for Polaris

#127-0010

Before you start:

- 1- Both boxes are completely identical.
- 2- Choose one box that will go on the left side and one on the right side.
- 3- Each box c/w a Wes Quick Release «Lock n' Go» kit (3 per kit)
- 4- This box set fits only on: Polaris Sportsman Touring 850 (2009+) / 550 (2010+) / 570 XP (2014+) / 1000 XP (2015+)
- 5- Remove the handles from your unit prior to installation

- The left and right side are determined by the position the rider is sitting on the ATV.

LEFT box here →




← **RIGHT** box here


Step 1: Underneath each box drill 3 holes at the 3 indicated spots:

570 XP (2014+)

850 (2009-2014) / 550 (2010-2014) / 1000 (2015 +)

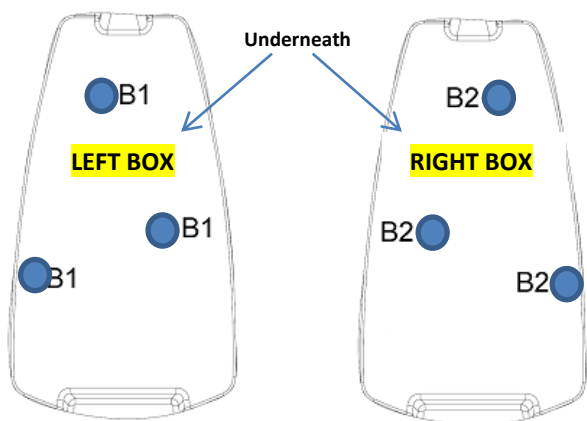


3/8" drill bit

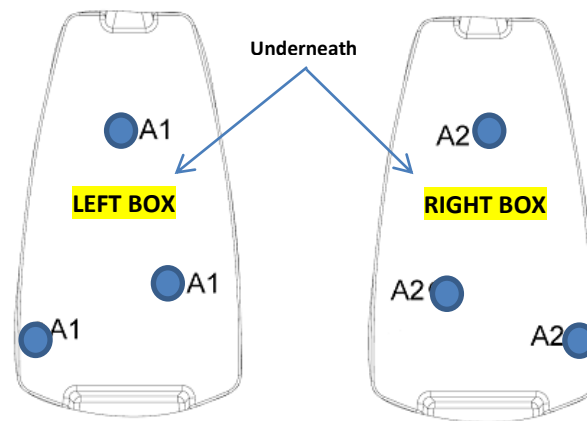

Step 2: For each box, insert 3 Quick Releases in the holes made at Step 1.

Step 3: Place the left box on the left side of the rear rack and insert all 3 Quick Releases in each hole. Tighten each knob securely. * Same procedure for right box

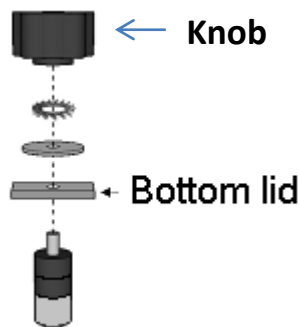

*** Make sure both boxes are securely fastened before each ride.**

Warning: Do not carry any flammable or explosive material / liquid.

Maintenance: Clean with mild soap and water only.

Warranty: One year from date of purchase or from date of manufacturing (whichever comes first)