

INSTALLATION INSTRUCTIONS: Honda Pioneer 1000 Roof Installation

It is recommended that bolts remain "hand tight" until all bolts are installed.

Contents:


- Roof Panel
- 8- 1 ¾ " Plastic Tube Clamp with "U" nut included

STEP 1



- Place the provided 1 ¾" plastic clamps ("U" nuts included) in the approximate locations indicated here.

STEP 2

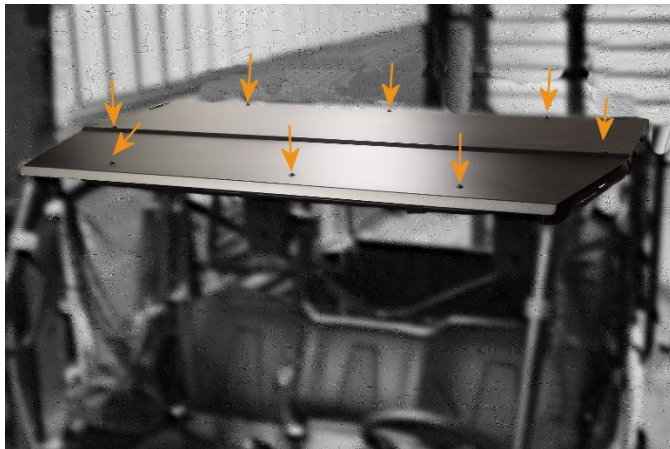

- Set roof panel in place.
- Align the precut holes in the roof with the corresponding holes in the plastic clamps.
- Secure the roof with the provided ¼-20 x 1" button head bolts with flat washer.
- Once all bolts are in place, make any final adjustments for square and tighten all the bolts.