



16-014

LO-PRO LIFT KIT

WILL FIT CLUB CAR® DS®

INSTALLATION INSTRUCTIONS



INCLUDED:

LIFT BLOCK

4 M8X55 HEX HEAD BOLTS

4 M8 FLAT WASHERS

4 M8 LOCKING NUTS



Lift Block

1

Place RUN/TOW switch in TOW position. Set brake and chock wheels. Lift cart with using jack stands and remove front wheels. Retain hardware.



Using a 9/16" socket and wrench. remove the four bolts on the lower plate.


2



Insert lift block in between leaf spring and top plate as shown.

3

Using supplied hardware, reattach bottom plate and tighten.

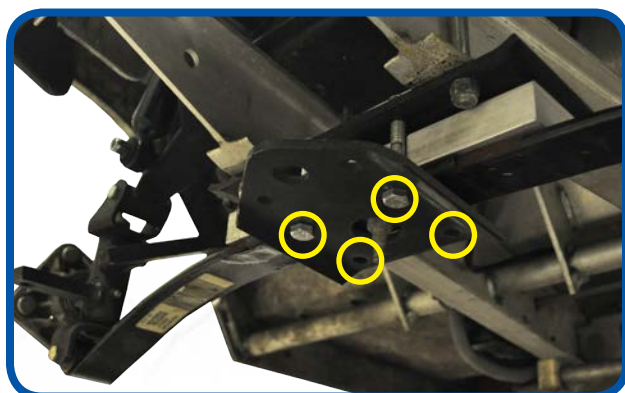

4



Using hardware retained from Step 1, reinstall front wheels and tighten.

5

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.